


Module to external equipment cabling

Cabling in this category connects the module I/O panel to any external equipment such as terminals and printers. [Figure 51](#) shows the cabling required for the QSDI and [Figure 52](#) shows the cabling required for the XSDI.

Figure 51
Side view of QSDI module cabling

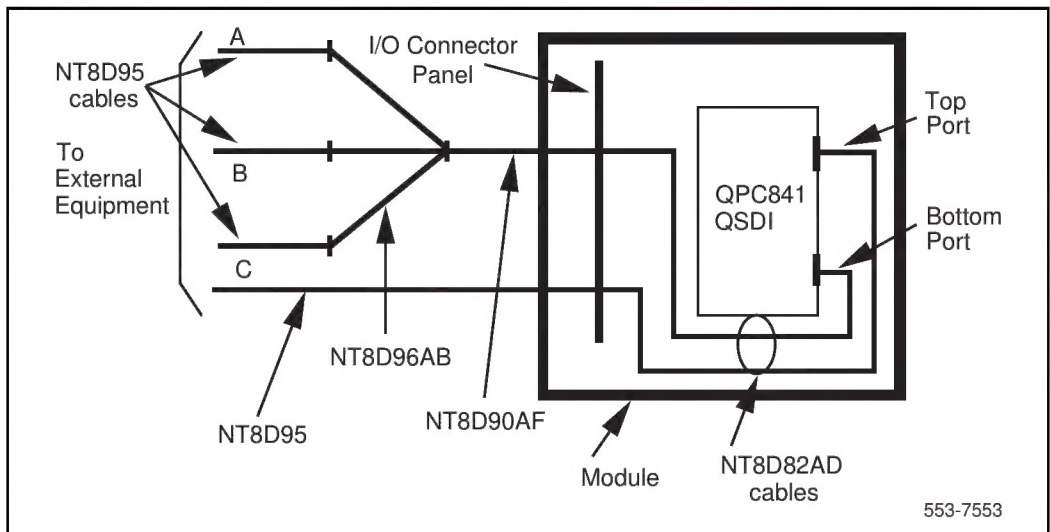

In [Figure 51](#) the bottom port of the QSDI contains three separate RS-232 channels, which are split by the NT8D96AB cable. In order to prevent cable congestion in the rear of the column, the NT8D90AF cable is used to split the ports outside the column. When congestion is not a problem the NT8D90AF cable can be eliminated and the NT8D96AB cable can be connected directly to the I/O panel.

Figure 52
Option 21/21E SDI and XSDI cabling

